



Click the button and follow the instructions.

CATEYE VELO WIRELESS CC-VT230W Quick Start

Thank you for purchasing our cyclocomputer CATEYE VELO WIRELESS.

This Quick Start Manual explains how to set up the computer and how to install the unit on your bicycle.

Please set up the unit according to the specified procedure, then it will be ready for use as a cyclocomputer.



Before use, read the instruction manual that comes with the product thoroughly to the end to understand the functions of this unit, and to use it safely in a correct manner.

This PDF contains a movie file.

When you click on the movie screen, a message regarding security appears. Click the "**Trust in the text**" or "**Play**" button to close the message. Click the screen again to play the movie.



Contents

Click the item you wish to view.

Operation of buttons

Set up the computer by operating the buttons as follows. Check the button position before you start setting up.



of the computer.

of the computer.



Setting up the computer



Clear all data (initialization)

Press the **AC** button on the back of the computer. After full lighting of the screen, the computer switches to the speed unit setting screen to start setup.





Setting up the computer



Setting the speed unit

When the **MODE** button is pressed, either "**km/h**" or "**mph**" is selected for the speed unit display. Select the display of your choice.

After selecting, press the **MENU** button to proceed to the next step "Entering the tire circumference".





Setting up the computer



Setting the tire size

There are two different ways to set the tire size with this unit; simple setting by selecting the tire size in inches, and detailed setting by entering the tire circumference.

- To set the tire size by selecting the size in inches, click "Simple setting".
- To set the tire circumference in detail, click "Detailed setting".



Setting up the computer



Setting the tire size (Simple setting)

When the **MODE** button is pressed, different sizes in inches are displayed. Select the display of your choice. After selecting, press the **MENU** button to proceed to the next step "Setting the clock display".





Setting up the computer



Setting the tire size (Detailed setting)

When the **MODE** button is pressed, different sizes in inches are displayed. Press the **MODE** button until "**205**[]" is displayed.

Press and hold to the **MODE** button with "**205**[]" displayed to change to the circumference entry screen.





Setting up the computer



Setting the tire size (Detailed setting)

Enter the tire circumference (cm) of your bicycle with 3 digits using the tire circumference reference table. Pressing the **MODE** button increases the value flashing, and pressing and holding the **MODE** button moves to the next digit.

After entering, press the **MENU** button to proceed to the next step "Setting the clock display".





Setting up the computer



Setting the clock display

When the **MODE** button is pressed, either "**12h**" or "**24h**" is selected for the clock display. Select the display of your choice.

After selecting, press and hold the **MODE** button to proceed to the next step "Setting the hour".





Setting up the computer



Setting the hour

Pressing the **MODE** button increases the value flashing ("Hour" of the clock). Enter any value.

* When **12h** is selected, enter the value while checking which one - **A** (AM) or **P** (PM) is displayed at the top of the screen.

After entering, press and hold the **MODE** button to proceed to the next step "Setting the minute".





Setting up the computer



Setting the minute

Pressing the **MODE** button increases the value flashing ("Minute" of the clock). Enter any value (Pressing and holding **MODE** rapidly increases the value).

After entering, press the **MENU** button to change to the measuring screen.

Increase the value



Setting up the computer



Now, setup of the computer is completed.

If the bracket and speed sensor are not installed on your bicycle, return to Contents, click the movies of how to install the bracket and speed sensor, and install them according to the instructions.



How to install the bracket

How to install the bracket [Nylon tie bracket] Click the screen to play.

* If the video does not play, please click here. (YouTube movie)



How to install the speed sensor

How to install the speed sensor

[Analog speed sensor]

Click the screen to play.

* If the video does not play, please click here. (YouTube movie)



Setting up the computer

Tire circumference reference table

ETRTO	Tire size	L (cm)	ETRTO	Tire size	L (cm)	ETRTO	Tire size	L (cm)	ETRTO	Tire size	L (cm)	ETRTO	Tire size	L (cm)
40-254	14x1.50	102	28-451	20x1-1/8	155	47-559	26x1.75	202	40-590	650x38A	213	28-622	700x28C	214
47-254	14x1.75	106	37-451	20x1-3/8	162	50-559	26x1.95	205	40-584	650x38B	211	30-622	700x30C	215
40-305	16x1.50	119	37-501	22x1-3/8	177	54-559	26x2.10	207	25-630	27x1 (630)	215	32-622	700x32C	216
47-305	16x1.75	120	40-501	22x1-1/2	179	57-559	26x2.125	207	28-630	27x1-1/8	216		700C Tubular	213
54-305	16x2.00	125	47-507	24x1.75	189	58-559	26x2.35	208	32-630	27x1-1/4	216	35-622	700x35C	217
28-349	16x1-1/8	129	50-507	24x2.00	193	75-559	26x3.00	217	37-630	27x1-3/8	217	38-622	700x38C	218
37-349	16x1-3/8	130	54-507	24x2.125	197	28-590	26x1-1/8	197	40-584	27.5x1.50	208	40-622	700x40C	220
32-369	17x1-1/4 (369)	134	25-520	24x1 (520)	175	37-590	26x1-3/8	207	50-584	27.5x 1.95	209	42-622	700x42C	222
40-355	18x1.50	134		24x3/4 Tubular	179	37-584	26x1-1/2	210	54-584	27.5x2.1	215	44-622	700x44C	224
47-355	18x1.75	135	28-540	24x1-1/8	180		650C Tubular	102	57-584	27.5x2.25	218	45-622	700x45C	224
32-406	20x1.25	145	32-540	24x1-1/4	191		26x7/8	192	18-622	700x18C	207	47-622	700x47C	227
35-406	20x1.35	146	25-559	26x1 (559)	191	20-571	650x20C	194	19-622	700x19C	208	54-622	29x2.1	229
40-406	20x1.50	149	32-559	26x1.25	195	23-571	650x23C	194	20-622	700x20C	209	56-622	29x2.2	230
47-406	20X1.75	152	37-559	26x1.40	201	25-571	650x25C 26x1	105	23-622	700x23C	210	60-622	29x2.3	233
50-406	20x1.95	157	40-559	26x1.50	201	25-571	(571)	195	25-622	700x25C	211			

Measure the tire circumference (L) of your bicycle

Adjust the tire pressure properly. With the rider's weight applied on the bicycle, roll the wheel one tire revolution with reference to a marker such as the valve, and measure the travel distance on the ground.

