

in this manual.

HOW TO USE

Х

Ring



Use the switch to switch between Hi and Low beams.

NOTE: The switch becomes hot while using the light unit. This is normal.

Switch	Run time
Press: Hi → Low → Hi	Approx. 2 hours (Hi mode)
Long press: Turn off	* The run time varies with the environment or conditions in which it is used.

B How to Adjust Beam Angle

Adjust the beam angle to avoid dazzling oncoming traffic by slightly loosening the dial of the bracket.

- **NOTE:** Do not loosen the dial too much, or the bracket strap may come off. Loosen the dial just enough to allow the bracket to move slightly. Securely tighten the dial after adjusting the strap.
 - It can also be adjusted 10 degrees to the left and right.

C Remaining battery

The color of the battery indicator built into the switch shows how much battery is left. **NOTE:** When the battery indication becomes red, charge the batteries as soon as possible.

When the battery indication becomes red, charge the batteries as soon as possil					
Guigeline for the battery indicator					
Green	: More than 50% left				
Yellow	: 50 to 20% left				

- Red : Less than 20%. Charge the battery unit.
- * The battery indicator is only an estimation of the remaining battery run-time, and varies with the environment or conditions of use.

How to Charge Battery unit

Important!

- If the battery unit is wet, wipe dry with a dry cloth before charging the batteries.
 Be sure to use only the supplied battery charger. This charger can accept 100-240 volts.
- If the charging indicator flashes green, there is a short somewhere in the circuit. Unplug the charger and remove the cause.
- If the charging indicator turns green a few minutes after charging begins or if the indicator continues a fast green flashing, stop charging, unplug the charger from the outlet, and do steps 1 and 2.
- If the same result occurs repeatedly, the batteries may be deteriorated.

 The standard charging time and run time are guideline values and depend on the operating environment.
- If the battery unit repeatedly does not meet the proper run time even though it is fully charged, it might be at the end of its operating life. Replace the old battery unit with a new one. The used battery unit should be disposed of properly according to local regulations.
- . Plug the battery charger to an AC outlet.
- NOTE: Check that the charging indicator flashes red three times as the power lamp turns red.
- 2. Connect the plug of the battery charger to the plug of the battery unit.
- **NOTE:** Charge the batteries with the plug locked.
 - When charging is complete, the indicator light changes from flashing red to green.

3. After charging is complete, make sure to unplug the charger from the AC outlet.

Charging indicator state Standard charging time

L			
l	Red light / Blinking green light: Charge error		
	Red light / Red light	: Charging	Approx. 3 hours
Į.	Red light / Green light	: Charging is completed	
l			

\triangle FOR SAFE OPERATION

- Never short-circuit the terminals of the battery unit or the battery charger. It may
 cause the unit to overheat, resulting in fire or damage to the component.
- The battery unit uses lithium batteries. If liquid leaks from the batteries, do not touch them with bare hands and do not bring them close to fire. Dispose of properly according to local regulations.
- Securely connect the plug and fasten the strap. Otherwise, they may come off
 while riding, causing the light to turn off, or you could topple over if the cord
 gets caught in the wheel.
- Never use damaged components (e.g., cables, etc.). Send any damaged components to our customer service department for repair.
- Do not stare at the light when it is on. Doing so may damage your eyesight.
 The light unit, including the switch, becomes very hot when on or immediately
- after being turned off. Please use with caution to avoid burns.
- Do not place it within children's reach.
- Never disassemble the light unit, battery unit, or battery charger.
- If the lamp body or parts become dirty with mud, etc., clean with a soft cloth which is moistened with mild soap. Never apply paint thinner, benzine or alcohol; damage will result.
- If the connecting plug is dirty, clean it with the plug locked.
- This product is water-resistant under normal daily use and can be used in the rain. However, do not intentionally submerge it in water.
- We recommend carrying a flashlight or spare battery unit with you in case the main battery dies.
- Place the swich at least 20 cm away from any wireless meter, as transmitting and receiving performance may be adversely affected.

Before Initial Use

The battery is shipped with a small charge, that is used to test the unit at the factory. It is necessary to charge the battery before initial use. (Refer to the "How to Charge" section in this manual.)

SPECIFICATIONS

A

B

T

Charging Indicator

C

Switch

(2)

S#

Light source Two High-Power White LEDs
Battery unit Rechargeable lithium-ion battery/7.4V, 2300mAh
Battery charger CHR-2300/4600mAh Li-ion (AC100V-240V 50/60Hz)
Operating time Approx. 2 hours (in the case of Hi)
Approx. 4 hours (in the case of Low)
Standard charging time Approx. 3 hours
Temperature range Charging : $41^{\circ}F - 104^{\circ}F$ ($5^{\circ}C - 40^{\circ}C$) Operating: $5^{\circ}F - 113^{\circ}F$ ($-15^{\circ}C - 45^{\circ}C$)
Recharge/discharge number of times
About 300 times (until the rated capacity drops to 70%)


To AC Power Outlet

LOCK

* The specifications and design are subject to change without notice.

2

SPARE PARTS

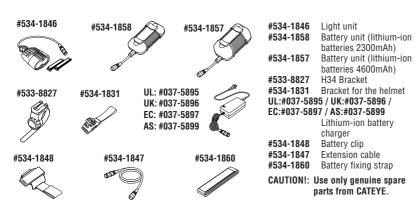

LIMITED WARRANTY

2-year Warranty :

Light Unit, Battery Unit, Battery Charger (Excluding degradation of the battery unit)

If trouble or damage occurs during normal use, the product will be repaired or replaced free of charge. Type your name, address, date of purchase and the situation of trouble clearly on the warranty certificate, and send it back to the appropriate service center together with the product. Insurance, handling and transportation charges shall be borne by the customer. After being repaired or replaced, the product will be shipped back to the customer.

CATEYE CO., LTD.

2-8-25, Kuwazu, Higashi Sumiyoshi-ku, Osaka 546-0041 Japan Attn: CATEYE Customer Service Section Phone : (06)6719-6863 Fax : (06)6719-6033 E-mail : support@cateye.co.jp URL : http://www.cateye.co.jp

Service & Research Address for USA CATEYE Service and Research Center 1705 14th St. 115 Boulder, CO 80302 Phone : 303.443.4595 Toll Free: 800.5CATEYE

Phone : 303.443.4595 Toll Free: 800.5CATEYE Fax : 303.473.0006 E-mail : service@cateye.com URL : http://www.cateve.com