



ENG

Fast charging cradle 2

CRA-002

Manual

Before using the light, read this manual thoroughly and keep it for future reference.



Copyright© 2017 CATEYE Co., Ltd.
CRA002-170925 1



LITHIUM-ION BATTERIES

Cautions on recharging

- Avoid charging in direct sunlight or in a vehicle parked under direct sunlight, and make sure to charge only when the ambient temperature is between 41°F and 104 °F (5 and 40°C).
- Before charging, be sure that no dust or other foreign objects attach to the USB plug.
- Do not subject the light to vibrations while charging.
- Once charging is complete, be sure to disconnect the USB plug.

Cautions in use


- Charging, discharging, and storing in high temperatures will cause the rechargeable battery to deteriorate faster. Do not place the light inside a vehicle or near a heater.
- When the operating time decreases significantly, the battery life is close to an end. Replace the cartridge battery with a new one.

Cautions on storage


- Cool and dry storage is recommended. For long period storage, it is important to charge the battery 30 minutes every 6 months.
- When you store the cartridge battery alone, be sure to install the cap. Otherwise, damage or a fire may be caused by short circuit.

Cautions for dispose

Dispose of used cartridge batteries appropriately according to local regulations.





Fast charging cradle 2

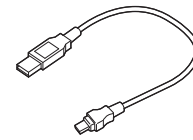USB cable
(MICRO USB)

Charging / Discharging

CAUTION! Do not reverse the connections for charging and discharging.

Charging (Charging a cartridge battery)

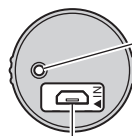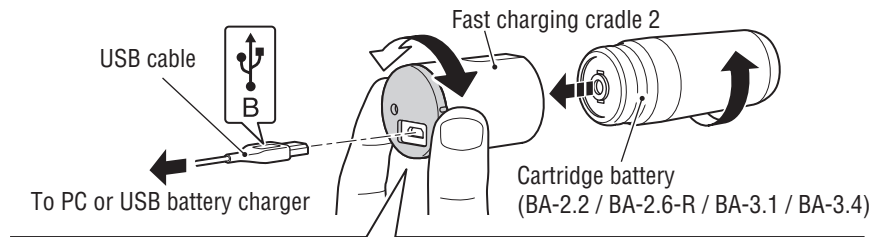

Charging indicator (red)

MICRO USB



On	Charging
Off	Charging is completed
Flashing	Charge error

Standard charging time**Approx. 3 – 11h**

* When charging a cartridge battery with the Fast charging cradle 2, use a USB charger of at least 1A. This enables fast charging. (Approximately 3 to 5 hours)

* Charging time is approximate values, and will vary depending on the environmental and usage conditions.

Discharging (Using a cartridge battery as a power supply)

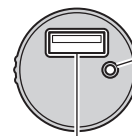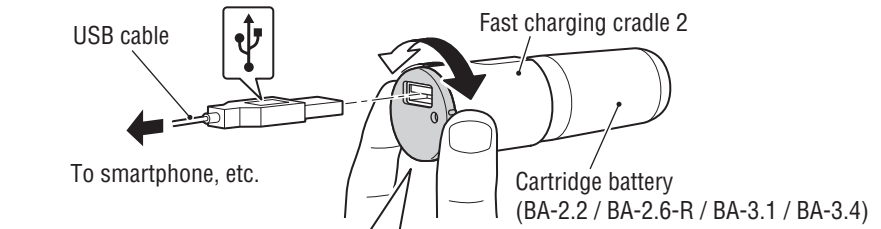

Battery indicator (green)

USB

On	Remaining battery power is low. Recharge the cartridge battery.
-----------	--

* Using the cradle with an iPhone requires a dedicated charging cable.

LIMITED WARRANTY

2-year Warranty : Fast charging cradle 2 only

CatEye products are warranted to be free of defects from materials and workmanship for a period of 2 years from original purchase. If the product fails to work during normal use, CatEye will repair or replace the defect at no charge. Service must be performed by CatEye or an authorized retailer. To return the product, pack it carefully and enclose the warranty certificate (proof of purchase) with instruction for repair. Please write or type your name and address clearly on the warranty certificate. Insurance, handling and transportation charges to CatEye shall be borne by person desiring service. For UK and REPUBLIC OF IRELAND consumers, please return to the place of purchase. This does not affect your statutory rights.

Please register your CatEye product on the website. <http://www.cateye.com/en/support/regist/>

CATEYE CO., LTD.

2-8-25, Kuwazu, Higashi Sumiyoshi-ku,
Osaka 546-0041 Japan
Attn: CATEYE Customer Service Section
Phone : (06)6719-6863
Fax : (06)6719-6033
E-mail : support@cateye.co.jp
URL : <http://www.cateye.com>

[For US Customers]

CATEYE AMERICA, INC.
2825 Wilderness Place Suite 1200,
Boulder CO 80301-5494 USA
Phone : 303.443.4595
Toll Free : 800.5.CATEYE
Fax : 303.473.0006
E-mail : service@cateye.com