




# AirGPS II QUICK CHART

## SETUP

### STEP 1

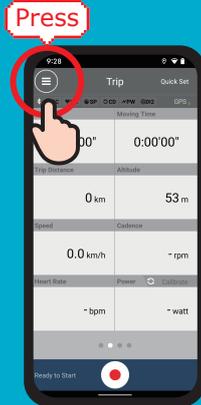

Download Cateye Cycling app.  
Open the app and then press .



Cateye Cycling




### STEP 2



Power on AirGPS II.  
Turn [Connect] on on Cycling app.

### STEP 3

Press [Device] and then [Pair to Device].  
After AirGPS II is detected, press [Pair to Device].

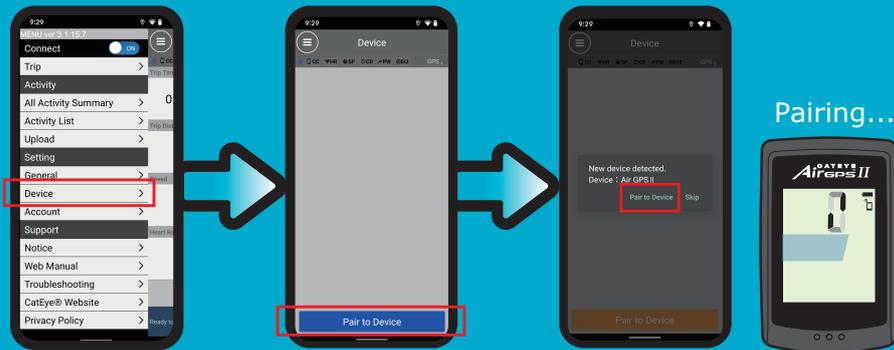


### STEP 4



After completion of pairing,  
turn [Connect] off.

# RECORD YOUR RIDE

## STEP 1

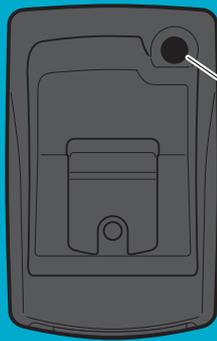

**Power on.**

Long press

## STEP 2



**Get GPS signal.**

No GPS signal received

GPS signal received

Wait outside for about 1-2 min.





## STEP 3



**Start recording.**

Press POWER or MODE button.

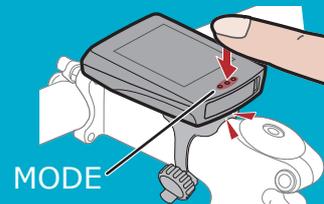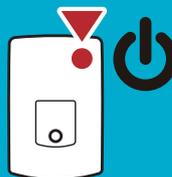


Press MODE:  
Changes bottom row data.



Long press MODE:  
Pauses/resumes recording.

## STEP 4

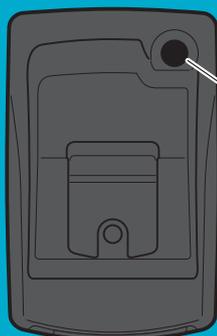


**Power off to end recording.**

Ride data will be automatically saved.

Long press

# IMPORT RIDE DATA

## STEP 1

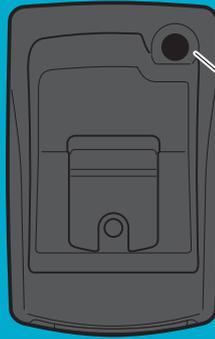

Power on.




## STEP 2



Open Cateye Cycling app and turn [Connect] on.

Press [Device] > [AirGPS II] > [Import from CC ].  
Select activity you want to import and then press [Select to Import ].

## STEP 3

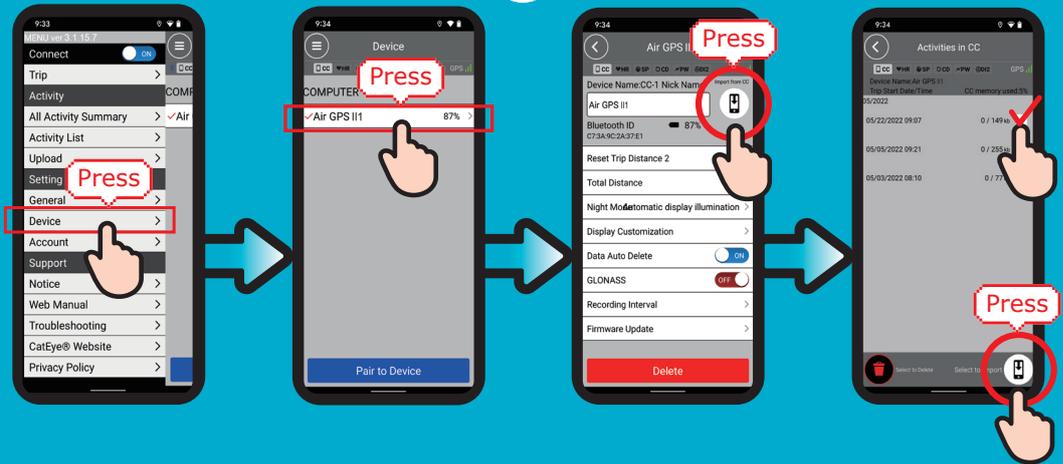



## STEP 4



After completion of import, turn [Connect] off.

# VIEW RIDE DATA

Select activity.

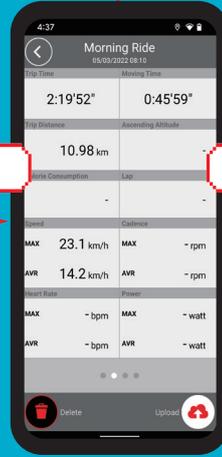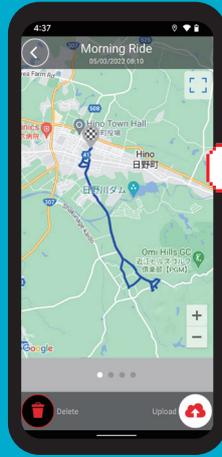


Map

Summary

Graph

# UPLOAD TO WEBSITES

Press [Upload]. Select activity you want to upload and then press [Upload ] button.

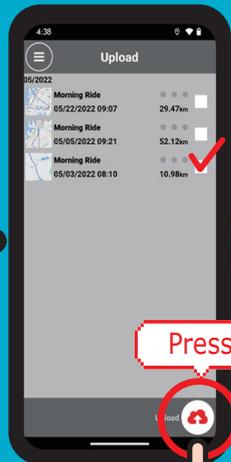

**STRAVA™**

**TRAINING PEAKS™**

## CHANGE SETTINGS



- 1) Open Cateye Cycling™ app.
- 2) Press [Device] > [AirGPS II]
- 3) Turn [Connect] off after you finish setting change.



### Settable Items

- Display customization
- Backlight (Night mode)
- Data auto delete
- GLONASS
- Sensor selection (when sensor is paired)
- Recording interval
- Distance 2 reset
- Total distance
- Firmware

## USE WITH SENSORS



### Pair sensors with your AirGPS II through app.

Through Cateye Cycling™ app, CATEYE brand sensors can be paired with your AirGPS II and tire circumference can be set.



ISC-12



SPD-30



CDC-30



HR-12



OHR-31

Please read the **instruction manual** for more details.