

#### AUTOMATIC LIGHTING TAIL-LIGHT CHARACTERISTICS

- The light automatically turns on when the sensor detects light or vibrations during nighttime riding.
- The light also remains on for approximately 50 seconds after the bicycle comes to a complete stop, which provides safety when waiting for a traffic signal to change and in similar situations.

### **PRECAUTIONS ON USE**

- Check periodically to ensure that the light unit is attached securely.
- Stop your bicycle to operate the switch.
- Keep the light away from children.
- This unit is not totally waterproof. Please wipe and dry it completely after using in rain. Otherwise, it may cause failure.
- If the light unit or parts become dirty with mud, etc., clean with a soft cloth which is moistened with mild soap. Never apply paint thinner, benzine or alcohol; damage will result.

#### ⚠ PRECAUTIONS WHEN REPLAC-ING THE BATTERY

- Do not press the switch when removing or installing the lens or batteries.
- Be sure to install batteries in the correct direction.
- Install the rubber gasket correctly to maintain waterproof features.
- Remove and store batteries when you will not use the light for a long period of time. Otherwise, batteries may leak liquid, which may result in failure.

### **MINSTALLATION PRECAUTIONS**

- Be sure to tighten the dial by hand. When you tighten it too hard with a tool, the screw thread may be stripped.
- Check the bracket frequently to be sure it is properly tightened at all times.
- Round off the cut edge of the bracket strap to prevent injury.









AA dry-cell battery


# **1** HOW TO INSTALL BATTERY

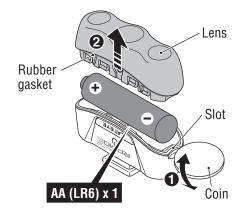

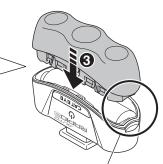


Close the lens with the slot facing to the body slot.

# 2 HOW TO MOUNT

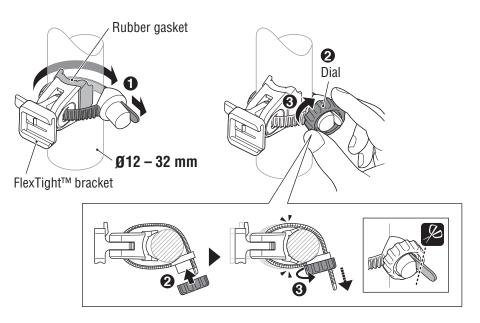


Attach securely in the mounting position.

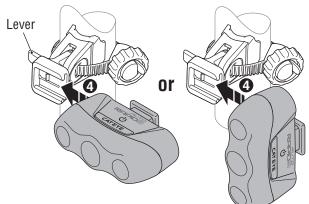

# HOW TO USE

Press and hold the switch to turn the power on or off. When the power turns off, the LED flashes three times.

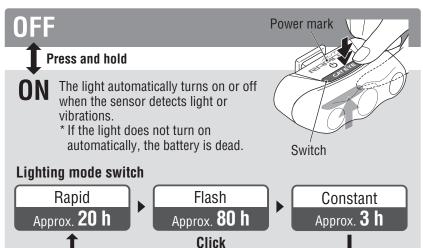

\* With the product turned on and the light off, click the button to turn on the light for 5 seconds.

\* The lighting mode will be recorded, and the light will turn on in this mode the next time as well.

### **SPARE/OPTIONAL PARTS**



5342280 FlexTight<sup>™</sup> bracket (SP-11)



5342460 Clip (C-2)



5445620 Rear rack bracket



5446510 RM-1 bracket



3980060 SR-2 bracket (for fi'zi:k ÌCS-compatible saddles)

5342410

FlexTight<sup>™</sup> bracket (SP-12-R)

# MAINTENANCE

Frequently wipe the lens clean of dirt. If the lens is extremely dirty, it will be difficult for light to reach the light sensor, which may lead to the light turning on even during the daytime.

### **SPECIFICATIONS**

	: AA dry-cell battery x 1
Temperature range	: 14°F – 104°F (-10°C – 40°C)
Dimensions/weight	: 2-19/32" x 29/32" x 1-11/16"
	(66 x 23 x 43 mm) / 1.6 oz
	(44 g) (Including batteries)
* The specifications without notice.	and design are subject to change

### LIMITED WARRANTY

#### 2-year Warranty: Light unit only

CatEve products are warranted to be free of defects from materials and workmanship for a period of 2 vears from original purchase. If the product fails to work during normal use. CatEve will repair or replace the defect at no charge. Service must be performed by CatEye or an authorized retailer. To return the product, pack it carefully and enclose the warranty certificate (proof of purchase) with instruction for repair. Please write or type your name and address clearly on the warranty certificate. Insurance, handling and transportation charges to CatEye shall be borne by person desiring service. For UK and REPUBLIC OF IRELAND consumers, please return to the place of purchase. This does not affect your statutory rights.

Please register your CatEye product on the website. http://www.cateve.com/en/support/regist/

## CATEYE CO., LTD.

2-8-25, Kuwazu, Higashi Sumiyoshi-ku, Osaka 546-0041 Japan Attn: CATEYE Customer Service Section

- Phone : (06)6719-6863
- Fax (06)6719-6033
- E-mail : support@cateye.co.jp
- URL : http://www.cateye.com

#### [For US Customers]

CATEYE AMERICA. INC. 2825 Wilderness Place Suite 1200. Boulder CO 80301-5494 USA Phone : 303.443.4595 Toll Free : 800.5.CATEYE : 303.473.0006 Fax E-mail : service@cateve.com