



Click the button and follow the instructions.

# CATEYE VELO WIRELESS+ CC-VT235W Quick Start

Thank you for purchasing our cyclocomputer CATEYE VELO WIRELESS +.

This Quick Start Manual explains how to set up the computer and how to install the unit on your bicycle.

Please set up the unit according to the specified procedure, then it will be ready for use as a cyclocomputer.



Before use, read the instruction manual that comes with the product thoroughly to the end to understand the functions of this unit, and to use it safely in a correct manner.

This PDF contains a movie file.

When you click on the movie screen, a message regarding security appears. Click the "Trust in the text" or "Play" button to close the message.


Click the screen again to play the movie.

**Contents** 


Click the item you wish to view.

## **Operation of buttons**

Set up the computer by operating the buttons as follows. Check the button position before you start setting up.

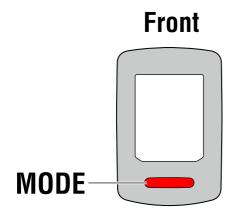

Press the **MODE** button on the front of the computer.

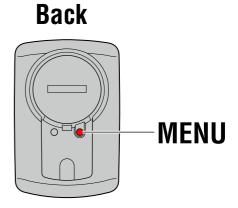

Press the **MENU** button on the back of the computer.



### Setting up the computer

Formatting operation

Setting the speed unit


Setting the tire size

Setting the clock display

Setting the hour


Setting the minute

Measuring screen (Setup screen)

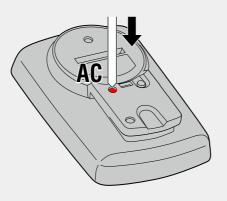

## Clear all data (initialization)

Press the **AC** button on the back of the computer. After full lighting of the screen, the computer switches to the speed unit setting screen to start setup.

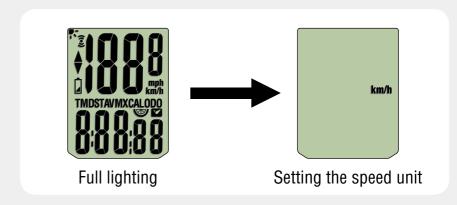



### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)



Setting the speed unit

## Setting the speed unit

When the **MODE** button is pressed, either "**km/h**" or "**mph**" is selected for the speed unit display. Select the display of your choice.

After selecting, press the **MENU** button to proceed to the next step "Entering the tire circumference".

km/h ↔ mph



To the next step





#### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size (1/2) (1/3)

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)



Setting the tire size

## **Setting the tire size**

There are two different ways to set the tire size with this unit; simple setting by selecting the tire size in inches, and detailed setting by entering the tire circumference.

- To set the tire size by selecting the size in inches, click "Simple setting".
- To set the tire circumference in detail, click "Detailed setting".

### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size (2/2)

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)



26"	→ 700c → 27"
20	7 1000 7 21
T	<b>*</b>
24"	27.5"
1	↓
22"	29"
<b></b>	↓
20"	<b>←18"←16"←205</b> []
	10 10 200[]

Different sizes in inches

## **Setting the tire size (Simple setting)**

When the **MODE** button is pressed, different sizes in inches are displayed. Select the display of your choice. After selecting, press the **MENU** button to proceed to the next step "Setting the clock display".

Select the size in inches



To the next step



### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size (2/3)

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)



26"	→ 700c → 27"
<b>↑</b>	<b>+</b>
24"	27.5"
<b>†</b>	<b>↓</b>
22"	29"
<b>†</b>	↓
20"	←18"←16"←205[]


Different sizes in inches

## **Setting the tire size (Detailed setting)**

When the **MODE** button is pressed, different sizes in inches are displayed. Press the **MODE** button until "205[]" is displayed.

Press and hold to the **MODE** button with "**205**[]" displayed to change to the circumference entry screen.



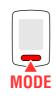

entry screen

MODE
(Press and hold)

To the circumference



### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size (3/3)

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)




Entering the circumference

## **Setting the tire size (Detailed setting)**

Enter the tire circumference (cm) of your bicycle with 3 digits using the tire circumference reference table.

Pressing the **MODE** button increases the value flashing, and pressing and holding the **MODE** button moves to the next digit.

After entering, press the **MENU** button to proceed to the next step "Setting the clock display".

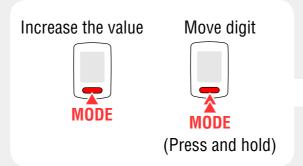

To the next step

MENU



### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)




Clock display

## Setting the clock display

When the **MODE** button is pressed, either "12h" or "24h" is selected for the clock display. Select the display of your choice.

After selecting, press and hold the **MODE** button to proceed to the next step "Setting the hour".

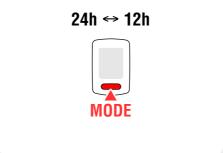

To the next step

MODE
(Press and hold)



### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size

Setting the clock display


Setting the hour

Setting the minute

Measuring screen (Setup screen)



# Hour (When the display format is **24h**)

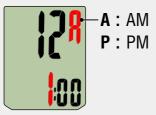

(When the display format is 12h)

## Setting the hour

Pressing the **MODE** button increases the value flashing ("Hour" of the clock). Enter any value.

\* When **12h** is selected, enter the value while checking which one - **A** (AM) or **P** (PM) is displayed at the top of the screen.

After entering, press and hold the **MODE** button to proceed to the next step "Setting the minute".

Increase the value



To the next step



(Press and hold)



### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)



Minute

## **Setting the minute**

Pressing the **MODE** button increases the value flashing ("Minute" of the clock). Enter any value (Pressing and holding **MODE** rapidly increases the value).

After entering, press the **MENU** button to change to the measuring screen.

Increase the value



Setup is completed. To the measuring screen





### Setting up the computer

Formatting operation

Setting the speed unit

Setting the tire size

Setting the clock display

Setting the hour

Setting the minute

Measuring screen (Setup screen)



Measuring screen

Now, setup of the computer is completed.

If the bracket and speed sensor are not installed on your bicycle, return to Contents, click the movies of how to install the bracket and speed sensor, and install them according to the instructions.

How to install the bracket

### How to install the bracket

[Nylon tie bracket]

Click the screen to play.

\* If the video does not play, please click here. (YouTube movie)

How to install the speed sensor

How to install the speed sensor [Analog speed sensor]


Click the screen to play.

\* If the video does not play, please click here. (YouTube movie)



**Backlight (Night Mode)** 


How to use

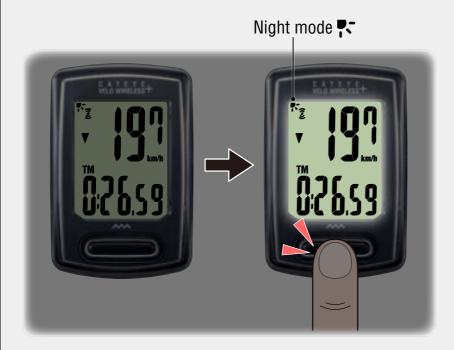

When you press the **MODE** or **MENU** button during the specified time that night mode is **ON** ( turns on), the backlight will turn on for 5 seconds. Backlight operation can be extended by pressing the button again.

\* When the remaining battery capacity is low (when ½ turns on), the backlight will not turn on.

#### Button operations (when night mode is enabled)

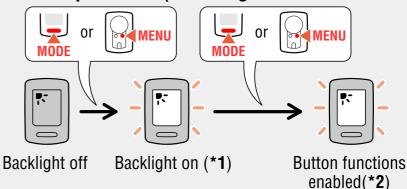

- \*1: When you press the button at the specified time, the backlight turns on, and the original function of the button is not performed.
- \*2: If you press the button while the backlight is on, the function of the button will be performed.




**Backlight (Night Mode)** 

How to set

From the measurement screen, press the **MENU** button to display the menu screen, "Night mode".

Press and hold the **MODE** button, and then set the night mode ON/OFF and set the start time and the end time.

\* After changing settings, be sure to press **MENU** to confirm changes.

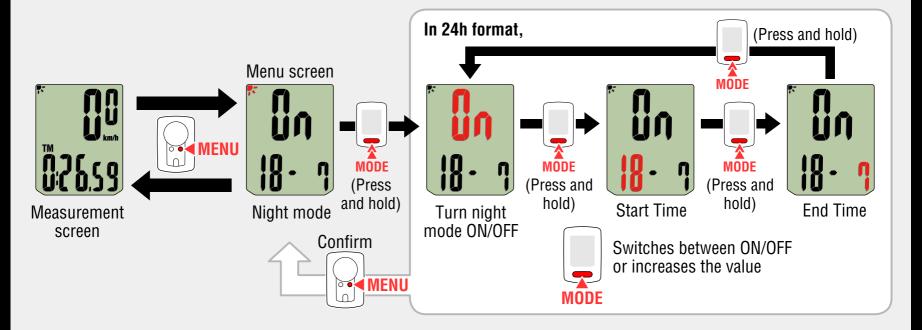

\* When **12h** format is selected, **A** (AM) or **P** (PM) is displayed at the top of the screen.



### Setting up the computer

#### Tire circumference reference table

ETRT0	Tire size	L (cm)
40-254	14x1.50	102
47-254	14x1.75	106
40-305	16x1.50	119
47-305	16x1.75	120
54-305	16x2.00	125
28-349	16x1-1/8	129
37-349	16x1-3/8	130
32-369	17x1-1/4 (369)	134
40-355	18x1.50	134
47-355	18x1.75	135
32-406	20x1.25	145
35-406	20x1.35	146
40-406	20x1.50	149
47-406	20X1.75	152
50-406	20x1.95	157

ETRT0	Tire size	L (cm)
28-451	20x1-1/8	155
37-451	20x1-3/8	162
37-501	22x1-3/8	177
40-501	22x1-1/2	179
47-507	24x1.75	189
50-507	24x2.00	193
54-507	24x2.125	197
25-520	24x1 (520)	175
	24x3/4 Tubular	179
28-540	24x1-1/8	180
32-540	24x1-1/4	191
25-559	26x1 (559)	191
32-559	26x1.25	195
37-559	26x1.40	201
40-559	26x1.50	201

ETRT0	Tire size	L (cm)
47-559	26x1.75	202
50-559	26x1.95	205
54-559	26x2.10	207
57-559	26x2.125	207
58-559	26x2.35	208
75-559	26x3.00	217
28-590	26x1-1/8	197
37-590	26x1-3/8	207
37-584	26x1-1/2	210
	650C Tubular 26x7/8	192
20-571	650x20C	194
23-571	650x23C	194
25-571	650x25C 26x1 (571)	195

ETRT0	Tire size	L (cm)
40-590	650x38A	213
40-584	650x38B	211
25-630	27x1 (630)	215
28-630	27x1-1/8	216
32-630	27x1-1/4	216
37-630	27x1-3/8	217
40-584	27.5x1.50	208
50-584	27.5x 1.95	209
54-584	27.5x2.1	215
57-584	27.5x2.25	218
18-622	700x18C	207
19-622	700x19C	208
20-622	700x20C	209
23-622	700x23C	210
25-622	700x25C	211

TRTO	Tire size	L (cm)
28-622	700x28C	214
30-622	700x30C	215
32-622	700x32C	216
	700C Tubular	213
35-622	700x35C	217
88-622	700x38C	218
0-622	700x40C	220
2-622	700x42C	222
4-622	700x44C	224
5-622	700x45C	224
7-622	700x47C	227
4-622	29x2.1	229
6-622	29x2.2	230
60-622	29x2.3	233

## Measure the tire circumference (L) of your bicycle

Adjust the tire pressure properly. With the rider's weight applied on the bicycle, roll the wheel one tire revolution with reference to a marker such as the valve, and measure the travel distance on the ground.

