



CATEYE MICRO Wireless CC-MC200W Quick Start Click the button and follow the instructions. Thank you for purchasing our cyclocomputer CATEYE MICRO Wireless.

This Quick Start Manual explains how to set up the computer and how to install the unit on your bicycle.

Please set up the unit according to the specified procedure, then it will be ready for use as a cyclocomputer.



Before use, read the instruction manual that comes with the product thoroughly to the end to understand the functions of this unit, and to use it safely in a correct manner.

This PDF contains a movie file.

When you click on the movie screen, a message regarding security appears. Click the "**Trust in the text**" or "**Play**" button to close the message. Click the screen again to play the movie.




Contents

Click the item you wish to view.


Operation of buttons


Set up the computer by operating the buttons as follows. Check the button position before you start setting up.

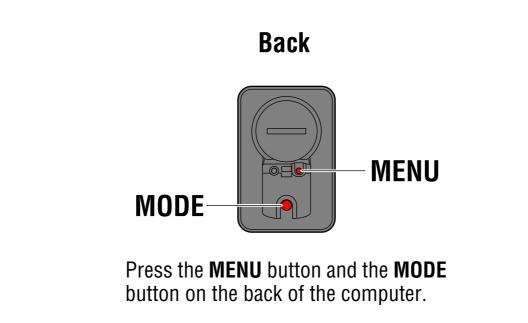



Setting up the computer

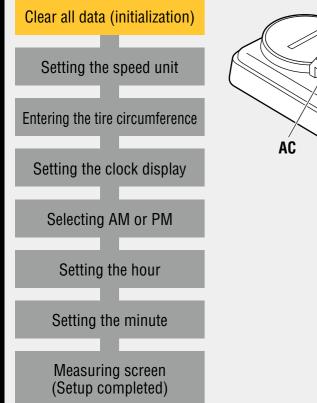

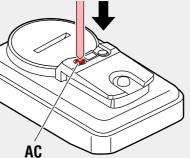

Clear all data (initialization)

Press the **AC** button on the back of the computer. After full lighting of the screen, the computer switches to the speed unit setting screen to start setup.








Setting the speed unit




Setting up the computer

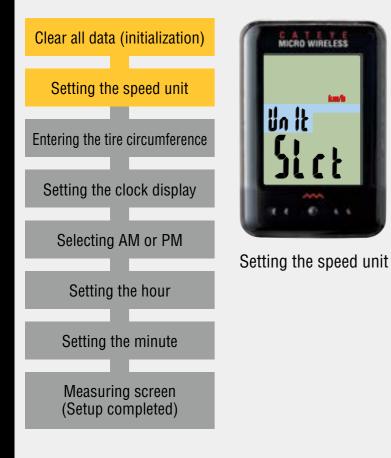

Setting the speed unit

When the **MODE** button is pressed, either "**km/h**" or "**mph**" is selected for the speed unit display. Select the display of your choice.

After selecting, press the **MENU** button to proceed to the next step "Entering the tire circumference".

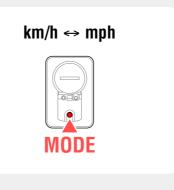


To the next step





Setting up the computer

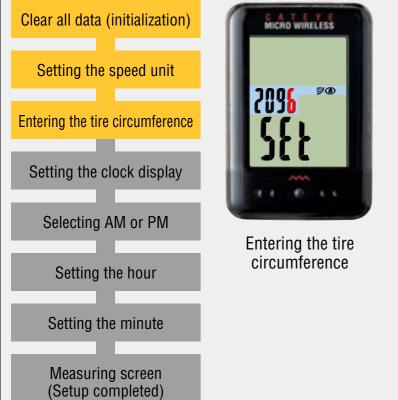


Entering the tire circumference

Enter the tire circumference (mm) of your bicycle with 4 digits using the tire circumference reference table.

Pressing the **MODE** button increases the value flashing, and pressing and holding the **MODE** button moves to the next digit.

After entering, press the **MENU** button to proceed to the next step "Setting the clock display".

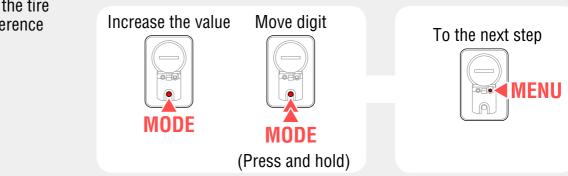



Setting up the computer





Setting the clock display


When the **MODE** button is pressed, either "**12h**" or "**24h**" is selected for the clock display. Select the display of your choice.

After selecting, press and hold the **MODE** button to proceed to the next step "Setting the hour".






Setting up the computer

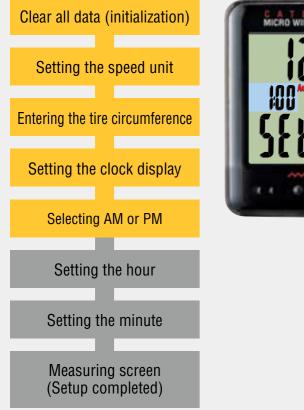




Setting the AM/PM display

When the **MODE** button is pressed, either "**AM**" or "**PM**" lights up. Select the display of your choice. Press and hold the **MODE** button to proceed to the next step "Setting the hour".

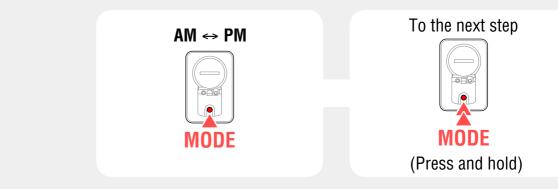




Setting up the computer

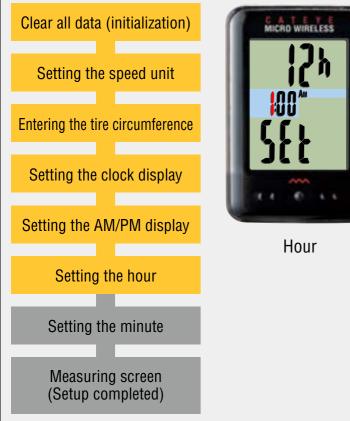


Setting the hour

Pressing the **MODE** button increases the value flashing ("Hour" of the clock). Enter any value. After entering, press and hold the **MODE** button to proceed to the next step "Setting the minute".

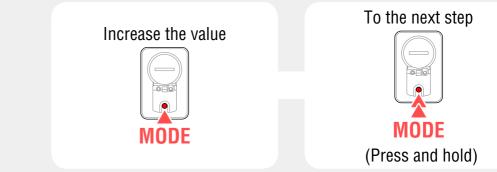



Setting up the computer

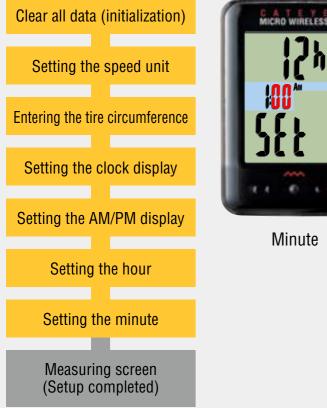



Pressing the **MODE** button increases the value flashing ("Minute" of the clock). Enter any value (Pressing and holding **MODE** rapidly increases the value).

After entering, press the **MENU** button to switch to the measuring screen.

Increase the value




Setup is completed. To the measuring screen





Setting up the computer

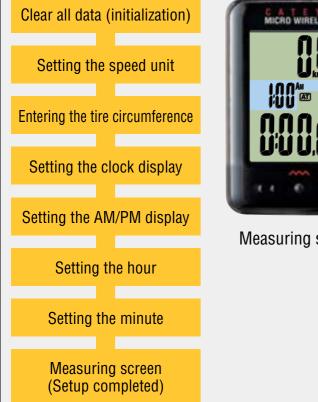

MICRO WIRELESS


Measuring screen

Now, setup of the computer is completed.

If the bracket and speed sensor are not installed on your bicycle, return to Contents, click the movies of how to install the bracket and speed sensor, and install them according to the instructions.




Setting up the computer

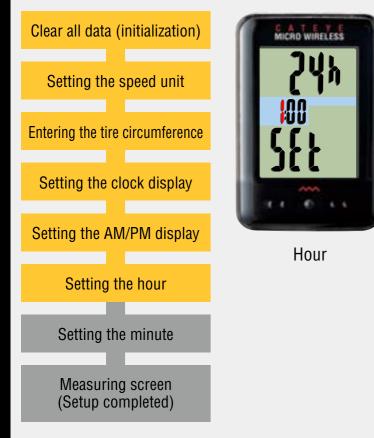


Setting the hour

Pressing the **MODE** button increases the value flashing ("Hour" of the clock). Enter any value. After entering, press and hold the **MODE** button to proceed to the next step "Setting the minute".

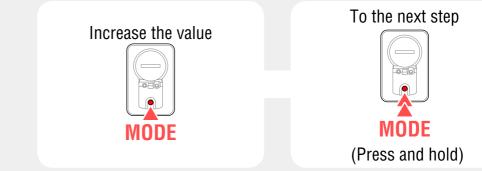



Setting up the computer

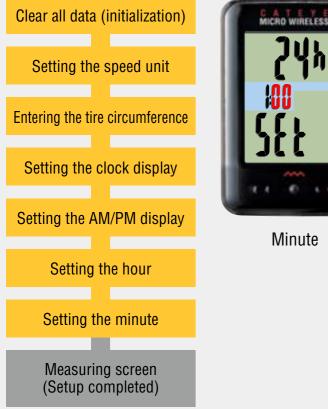



Pressing the **MODE** button increases the value flashing ("Minute" of the clock). Enter any value (Pressing and holding **MODE** rapidly increases the value).

After entering, press the **MENU** button to switch to the measuring screen.

Increase the value




Setup is completed. To the measuring screen





Setting up the computer

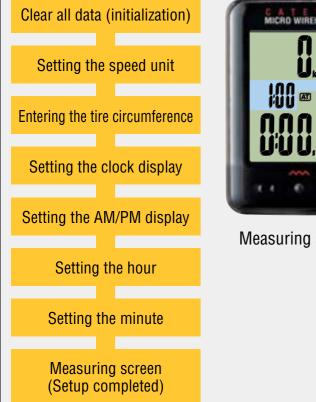

MICRO WIRELESS

Measuring screen

Now, setup of the computer is completed.

If the bracket and speed sensor are not installed on your bicycle, return to Contents, click the movies of how to install the bracket and speed sensor, and install them according to the instructions.



How to install the bracket

How to install the bracket [FlexTight™] Click the screen to play.

* If the video does not play, please click here. (YouTube movie)



How to install the speed sensor

How to install the speed sensor [Analog speed sensor] Click the screen to play.

* If the video does not play, please click here. (YouTube movie)



Setting up the computer

Tire circumference reference table

* Generally, the tire size or ETRTO is indicated on the side of the tire.

ETRTO	Tire size	L (mm)	ETRTO	Tire size	L (mm)	ETRTO	Tire size	L (mm)	ETRTO	Tire size	L (mm)	ETRTO	Tire size	L (mm)
47-203	12x1.75	935	47-406	20X1.75	1515	37-559	26x1.40	2005	25-571	650x25C 26x1	1952	32-622	700x32C	2155
54-203	12x1.95	940	50-406	20x1.95	1565	40-559	26x1.50	2010	23-371	(571)	1952		700C Tubular	2130
40-254	14x1.50	1020	28-451	20x1-1/8	1545	47-559	26x1.75	2023	40-590	650x38A	2125	35-622	700x35C	2168
47-254	14x1.75	1055	37-451	20x1-3/8	1615	50-559	26x1.95	2050	40-584	650x38B	2105	38-622	700x38C	2180
40-305	16x1.50	1185	37-501	22x1-3/8	1770	54-559	26x2.10	2068	25-630	27x1 (630)	2145	40-622	700x40C	2200
47-305	16x1.75	1195	40-501	22x1-1/2	1785	57-559	26x2.125	2070	28-630	27x1-1/8	2155	42-622	700x42C	2224
54-305	16x2.00	1245	47-507	24x1.75	1890	58-559	26x2.35	2083	32-630	27x1-1/4	2161	44-622	700x44C	2235
28-349	16x1-1/8	1290	50-507	24x2.00	1925	75-559	26x3.00	2170	37-630	27x1-3/8	2169	45-622	700x45C	2242
37-349	16x1-3/8	1300	54-507	24x2.125	1965	28-590	26x1-1/8	1970	18-622	700x18C	2070	47-622	700x47C	2268
32-369	17x1-1/4 (369)	1340	25-520	24x1 (520)	1753	37-590	26x1-3/8	2068	19-622	700x19C	2080	54-622	29x2.1	2288
40-355	18x1.50	1340		24x3/4 Tubular	1785	37-584	26x1-1/2	2100	20-622	700x20C	2086	60-622	29x2.3	2326
47-355	18x1.75	1350	28-540	24x1-1/8	1795		650C Tubular	1920	23-622	700x23C	2096			
32-406	20x1.25	1450	32-540	24x1-1/4	1905		26x7/8	1920	25-622	700x25C	2105			
35-406	20x1.35	1460	25-559	26x1 (559)	1913	20-571	650x20C	1938	28-622	700x28C	2136			
40-406	20x1.50	1490	32-559	26x1.25	1950	23-571	650x23C	1944	30-622	700x30C	2146			


Measure the tire circumference (L) of your bicycle

Adjust the tire pressure properly. With the rider's weight applied on the bicycle, roll the wheel one tire revolution with reference to a marker such as the valve, and measure the travel distance on the ground.



Operation of buttons

The computer is operated by the following button operations.

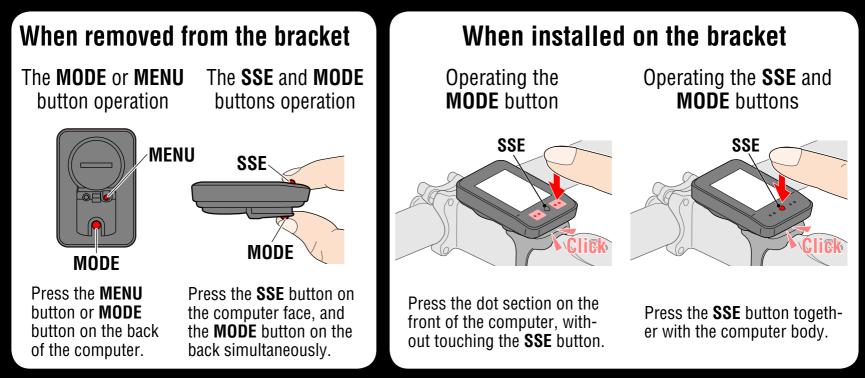



Various functions

Click the item you wish to view.

You can use the stopwatch independently of measurement.

You can use the **MODE** button to turn on the backlight.

You can constantly display the data of your choice in the upper display.

You can skip unnecessary data.



Stop watch

How to use



You can use the stopwatch independently of measurement.

Starting/Stopping the stopwatch


Pressing the **SSE** button together with the **MODE** button starts and stops counting.

- * **Ö** flashes during count.
- * To use the stopwatch, turn on the auto mode (AT ON). See the instruction manual to set the auto mode.

Resetting the stopwatch

With the stopwatch displayed, press and hold the **SSE** button together with the **MODE** button.

* When the stopwatch is displayed in the upper display, display the current speed (**Spd**) in the bottom row, and perform the reset operation.

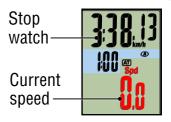




Stop watch

How to know the total time to the destination

You can count the total time from departure to the destination.

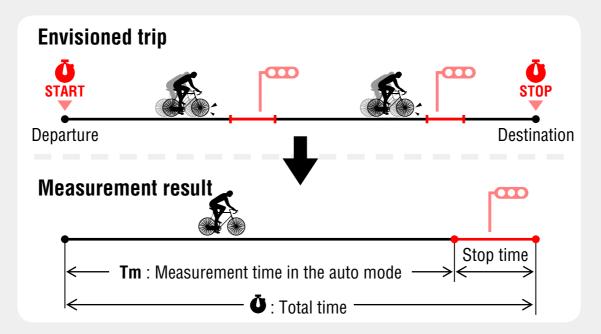


Use 1



Stop watch




How to know the elapsed time in a given interval

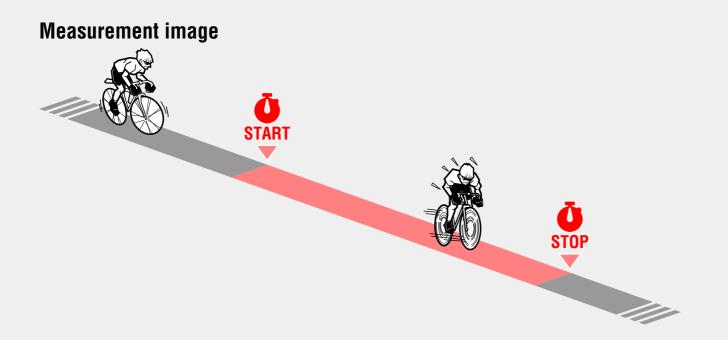



Backlight (Night mode)

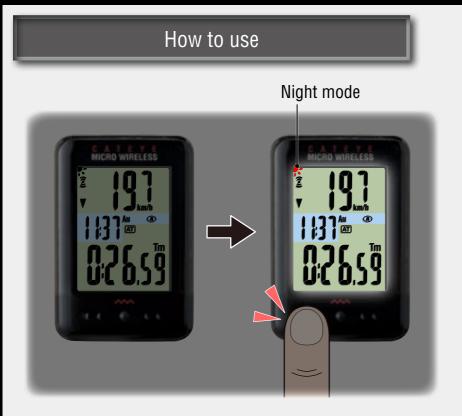

Night mode

With the night mode turned on (**F** ON), pressing the **MODE** button turns on the backlight for 5 seconds.

- * When the backlight is turned on, pressing any button turns on the backlight for another 5 seconds.
- * The night mode is automatically turned off without any signal received for 10 minutes.
- * When the battery level falls (DN), the backlight is not turned on even if the night mode is on.



Backlight (Night mode)


How to set

How to set the night mode

From the measuring screen, pressing and holding the **MODE** button repeatedly 2 times turns on the night mode.

* You can set ON/OFF of the night mode also from the Menu screen.

For details, see the instruction manual.

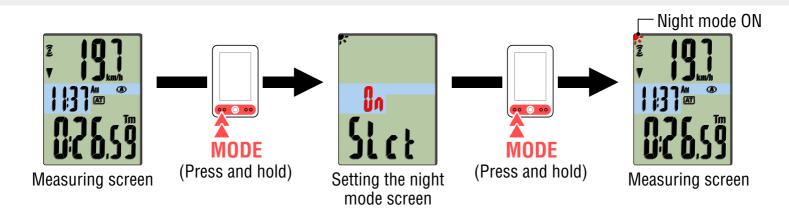



Upper display selection


How to use

Setting the upper display

Any data can be selected to be displayed on top constantly.

* Once you change the upper display, the current speed (**Spd**) shows up at the bottom among other data.

When the elapsed time (Tm) is displayed in the upper display

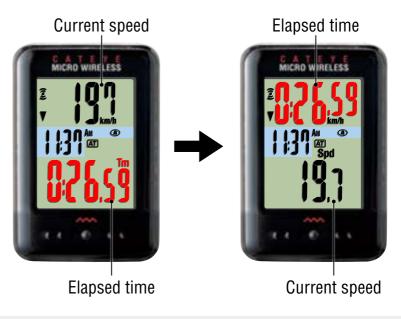




Upper display selection

How to set (1/3)

How to set the upper display (1/3)

From the measuring screen, press the **MENU** button to switch to the Menu screen.

Press the **MODE** button once to flash the number in the upper display, and press and hold the **MODE** button.

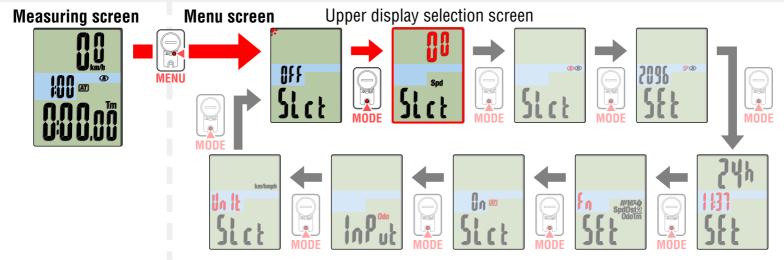



Upper display selection

How to set (2/3)




Upper display selection

How to set the upper display (2/3)

Pressing the **MODE** button switches the icon to select the data for the upper display.

* To select the stopwatch, turn on the auto mode.

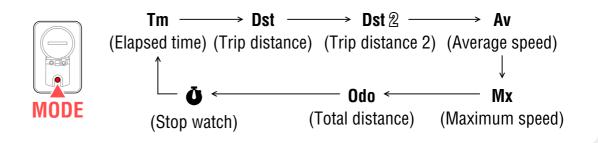



Upper display selection

How to set (3/3)



Measuring screen

How to set the upper display (3/3)

Pressing the **MENU** button 2 times registers the changed settings, and returns to the measuring screen.

Setup is completed. To the measuring screen






How to use

Setting the function to display

You can switch the screen quickly, by skipping the data less frequently used.

* The skipped data is not displayed, but it is measured internally.

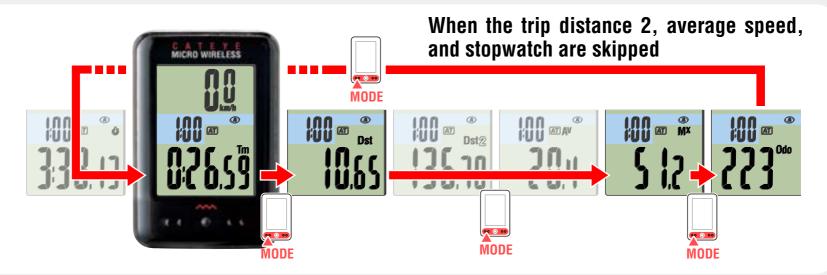




How to set (1/3)

Setting the function to display (1/3)

From the measuring screen, press the **MENU** button to switch to the Menu screen. Press the **MODE** button 5 times to flash "**Fn**" on the screen, and press and hold the **MODE** button.

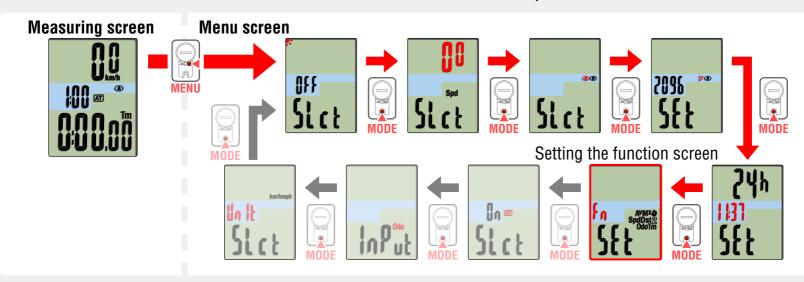



How to set (2/3)




Setting the function to display

Setting the function to display (2/3)

Pressing and holding the **MODE** button switches the flashing icon. Press the **MODE** button to set ON/OFF of the flashing icon. Set OFF of the icon for the data to be skipped.

* To display the skipped data again, set ON of the icon.

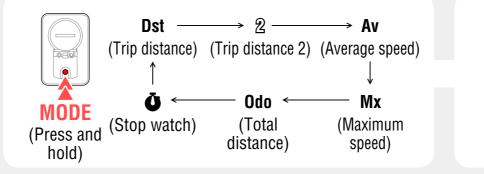

ON ↔ OFF





How to set (3/3)



Measuring screen

Setting the function to display (3/3)

Pressing the **MENU** button 2 times registers the changed settings, and returns to the measuring screen.

Setup is completed. To the measuring screen

